USER'S MANUAL

SUITABLE FOR CHILDREN
AGED 3 YEARS AND UP

Keyboard Rock Star Set

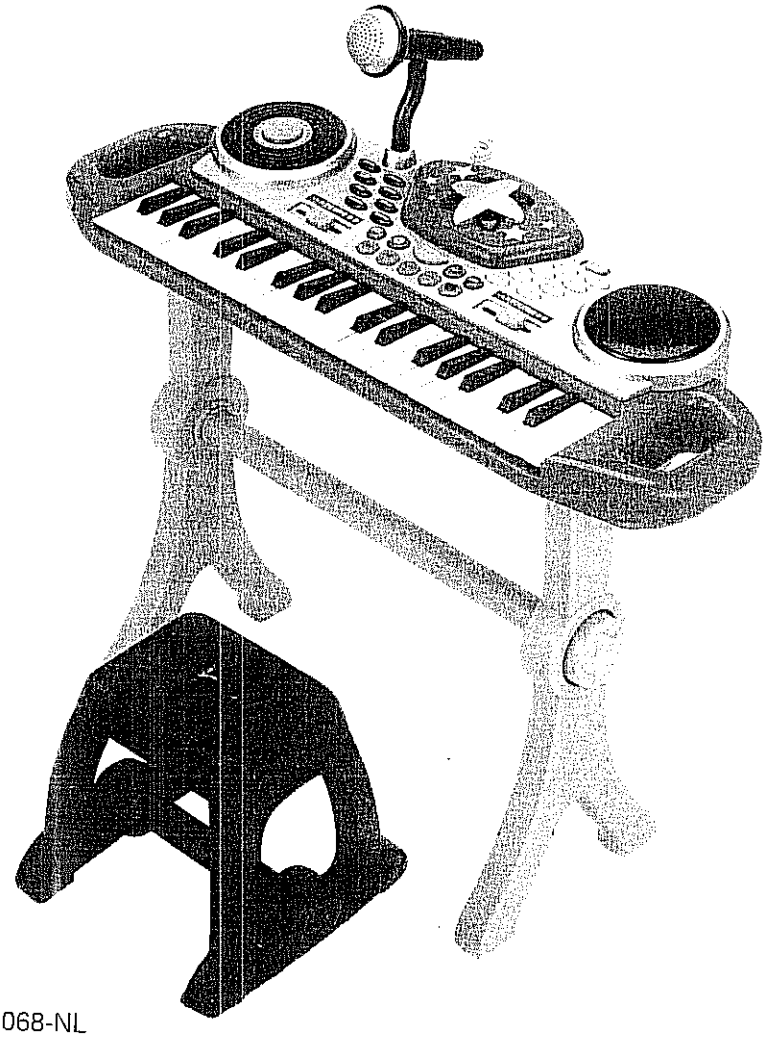

Item No. 2068-NL

INTRODUCTION :

The **Keyboard Rock Star Set**, enhanced with flashing lights, features a detachable microphone for sing along fun. Special record and playback functions allow for composing and hearing each masterpiece which can be enhanced with fun sound effects, rhythms, drums and orchestration instruments. The **Keyboard Rock Star Set** has a built-in handle for easy access and portability, a stand and stool are included for those solo performances.

INCLUDED IN THIS PACKAGE :

- **Keyboard Rock Star Set** toy
- Detachable Microphone
- Microphone Stand
- Keyboard Stand
- Stool
- User's manual

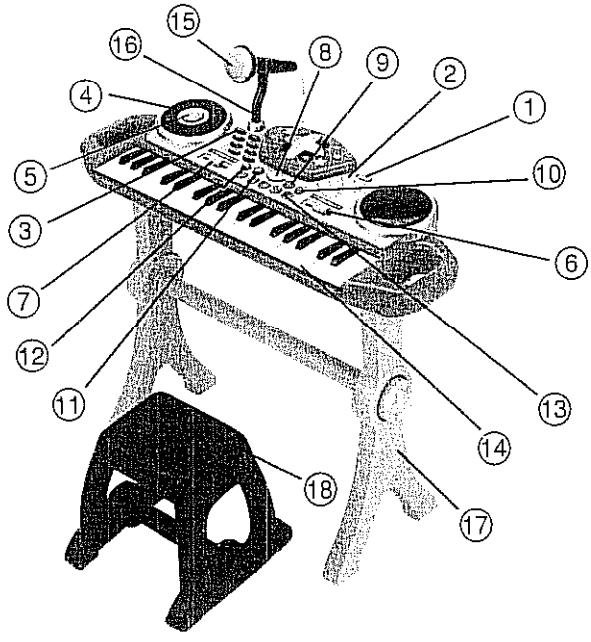

DIAGRAM :

1) ON / OFF Switch
2) Rhythm Buttons
3) Instrument Buttons
4) DJ Scratch Disc
5) Sound Effect Button
6) Volume Control Slide Switch
7) Tempo Control Slide Switch
8) Try Me Button
9) Playback Button
10) Stop Button
11) Record Button
12) Song Demo Button
13) Drum Buttons
14) 37 Keys Keyboard
15) Microphone
16) Microphone Stand
17) Keyboard Stand
18) Stool

MAIN FEATURES :

- 37 keys electronic keyboard.
- Detachable microphone for sing along fun.
- DJ scratch disc with 5 fun sound effects for remixing.
- 8 instrument selection to create an orchestra sound.
- 8 rhythm selection to add dance beats.
- 5 drum sounds for total effect.
- Record and playback function to hear your masterpiece.
- Balance slide switch to adjust tempo and volume.
- 8 super bright LED's to create attitude.
- Built-in handle for easy carrying.
- Stand and stool included for solo practice.
- Automatic shut off function.

ADULT ASSEMBLY REQUIREMENTS FOR THE KEYBOARD SET :

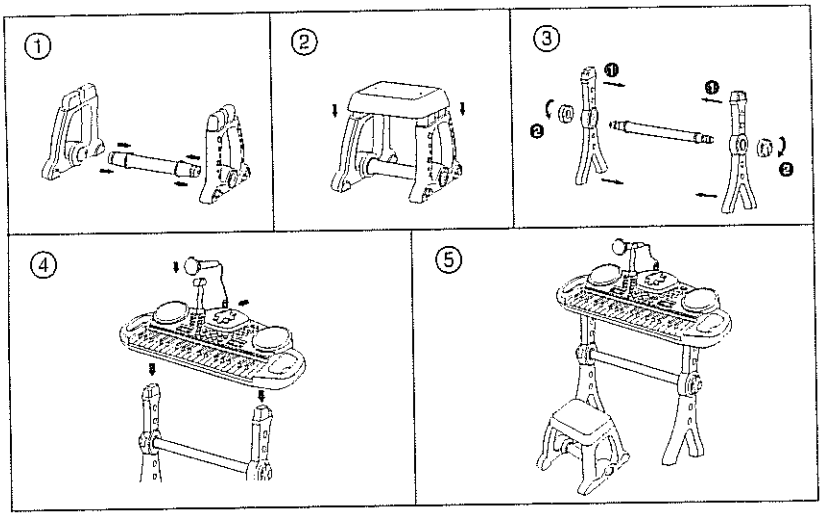

HOW TO PLAY YOUR KEYBOARD :

TO START
Slide the ON/OFF switch to ON, the keyboard is ready to play.

RHYTHM BUTTONS
Press one of the 8 rhythm buttons to hear the rhythm playing.

INSTRUMENT BUTTONS
Press one of the 8 instrument buttons to play that instrument on the keyboard.

DJ SCRATCH DISC
Spin the disc to mix in cool scratch sounds with the music that is playing.

SOUND EFFECT BUTTON
Press the SOUND EFFECT button to mix your selected sound effect with the melody that is playing.

RECORD BUTTON
Press the RECORD button to record the melody.

PLAY BUTTON
Press the PLAY button to play back the melody that you have recorded.

STOP BUTTON
Press the STOP button to stop the function.

DEMO SONG BUTTON
Press the DEMO SONG button, you will hear the preset music.

DRUM SW/SAMBA BUTTON
Press the button to select the drum sounds or drum rhythm effects.

DRUM BUTTONS
Press the buttons to play drum sounds or drum rhythm effects.

VOLUME CONTROL SWITCH
Slide the switch to left or right to adjust the volume.

TEMPO CONTROL SWITCH
Slide the switch to left or right to adjust the speed of the rhythm.

SPECIAL NOTE :

If the **Keyboard Rock Star Set** suddenly stops working, the voice becomes faint or the sound seems weak, the problem may be low battery power. If this is the case, install a new set of batteries before using.

BATTERY INSTALLATION :

- Make sure the toy is switched OFF.
- Remove the battery cover from the back of the toy. Use a screwdriver to open the battery cover.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are recommended.
- Replace and secure the battery cover.
- After inserting the batteries, switch ON the toy.
- Batteries must be installed and replaced by an adult.

BATTERY NOTICE :

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted according to the correct polarity (+ and -). Incorrect insertion can damage the unit, provoke fire or cause the batteries to explode.
- Exhausted batteries are to be removed from the toy.
- Remove batteries when the toy is not to be used for a long period of time.
- Do not throw batteries into a fire.
- Do not attempt to open ordinary or rechargeable batteries.
- The supply terminals are not to be short-circuited.
- Never leave button-cell batteries within reach of young children.
- Batteries are harmful if swallowed, so keep them away from young children.

CARE AND MAINTENANCE :

- Keep the unit clean by wiping it with a dry cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the toy is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

CAUTION :

- All packing materials such as tape, plastic bags, plastic sheets, wire ties and tags are not part of the toy and should be discarded for children's safety.
- Under the environment with electroctatic discharge, the product may malfunction and memory lost. It requires user to reset the product.

Processing of electric and electronic equipment at the end of their service life (applicable in member countries of the European Union and other European countries operating a selective waste collection system).

This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased.

During the replacement of your used batteries, we request that you follow the current regulations as to their elimination. We thank you for depositing them in a location foreseen for that purpose to ensure their elimination in a sure manner and with respect for the environment.

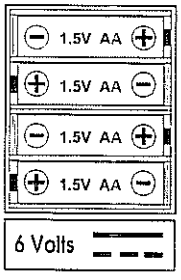

Uses 4 "AA" size (UM3/LR6) batteries.
Alkaline batteries are recommended.

COLOR AND DESIGN MAY VARY.
PRODUCT SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

Caili Electronics (Shenzhen) Co. Ltd.
(Subsidiary of Winfat Ind. Co. Ltd.)
No.48, 228 Industrial Estate,
Heng Gang Town, Long Gang District,
Shenzhen, China.

Printed in China
0301-2068-NL-WI12-001(R1)